

# Mirador Exit



## Installation Instructions



**NOTE:** All electrical work must be carried out by a licensed electrician as per the latest AS 3000 wiring regulations. Light must be operated within its specified operating parameters and in accordance with our warranty requirements. Isolate the electrical supply before installing, decommissioning or replacing the fitting.

This is an indoor product only.

## INSTALLATION




1 Remove the mounting bracket by inserting a screwdriver into the locking tab.



2 Place the mounting bracket at the ceiling/wall location. Mark the position of the screw holes and cable entry through the bracket.  
**NOTE:** allow at least 50mm of free space to either side of the final location of the fitting to allow for its sliding mechanism.



3 Remove the bracket to show the hole markings. Drill a 20mm hole for the cable entry. Install the bracket. Make sure the mounting screw locations are against solid material to support the weight of the fitting.

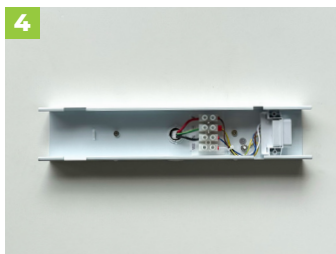

4 Feed the cables through the holes of the mounting bracket and connect the cables into the terminal block.



5 Slide the fitting into the mounting bracket by holding the unit horizontal to and parallel with the bracket. Ensure the metal lugs line up.



6 Fit the side of the fitting into the slot of the bracket first, then slide the unit in.




7 Inserts can be fitted by gently inserting the tabs into the 6x slots under the diffuser panel.







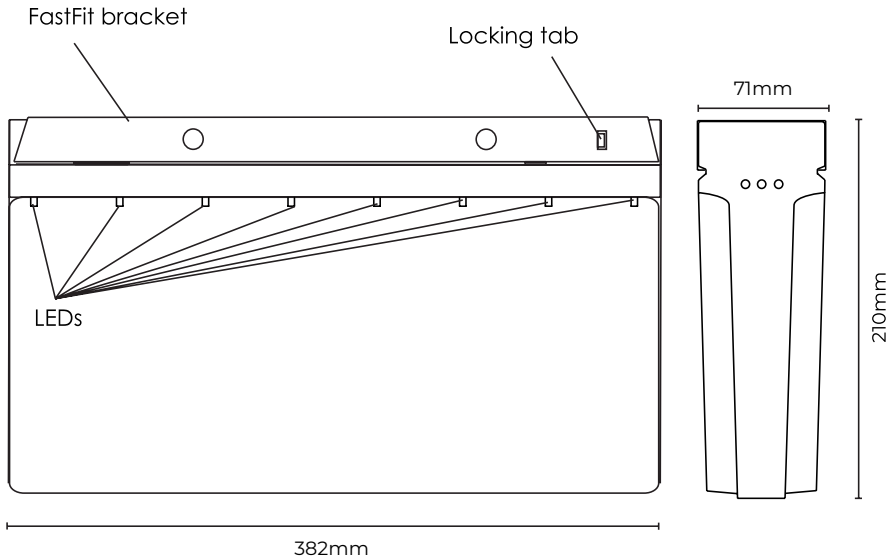










**NOTE:** Regularly discharging the batteries e.g. during construction stage, will significantly shorten the battery lifespan. Product failure as a result of this practice is strictly **NOT COVERED UNDER WARRANTY.**

## DIMENSIONS



## SELF-TEST FUNCTION

Indicator colour			Status - light operation
 Charge indicator		 Status	Green LED ON Yellow LED ON Normal mode passed last test. Battery on charge.
 Charge indicator		 Status	Green LED OFF Yellow LED OFF Exit / emergency luminaire on test. Mains supply off.
 Charge indicator		 Status	Yellow LED flashing 3 seconds ON 1 second OFF Green LED ON Exit / emergency luminaire passed the 90 minute test in previous 3 days.
 Charge indicator		 Status	Yellow LED flashing continuously Green LED ON Exit / emergency luminaire failed the 90 minute test.
 Charge indicator		 Status	Yellow LED flashing for 5 seconds Green LED ON Manual test command accepted, test delayed to allow battery to recharge.

## BATTERY REPLACEMENT

Only replace the battery with an enLighten replacement battery - part no. **Mira-EXIT-Batt**. Failure in doing so will void all warranty and manufacturer liability as a result of user negligence.

To replace the battery, remove the fitting from the mounting bracket as shown in Image 1. Disconnect the red and black in-line connector and connect the new battery. Slide the fitting back into the mounting bracket.

The expected life of the battery is 5 years with the expectation that the battery is constantly charged, received a cyclic discharge at least every 6 months, and is operated within its intended environment and conditions.

Dispose of the old battery properly by taking it to a designated recycling facility for batteries.

