Chamaeleon Eco


Remote Commissioning Tool EN-ERC



User Manual

The remote commissioning tool is used to adjust settings on the Chamaeleon Eco fitting, to suit various environments. To apply a setting to the fitting, point the commissioning tool at the fitting then press the relevant button. The fitting will beep if the setting is received successfully.

Using the remote will override settings previously set with the dipswitches inside the fitting.

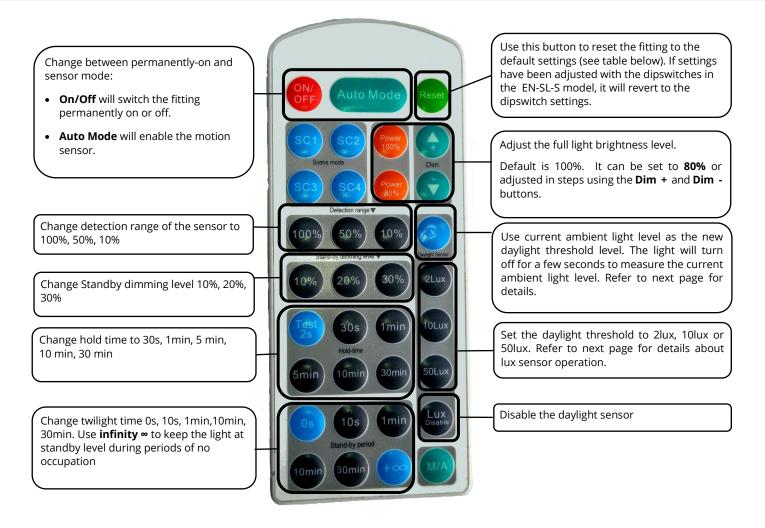

Indicative Settings guide

| Location | Sensitivity | Hold Time | Standby Time |
|-------------------------|----------------|---------------|--------------|
| Fire Stairs | 100% | 30 sec | Infinity |
| Corridors | 100% | 1 min | Infinity |
| Car Park Driveways | Permanently-on | —— | —— |
| Car Park Parking Bays | 100% | 1min or 5 min | Infinity |
| Store Rooms/Plant Rooms | 100% | 10 min | 1 min |

Default settings

| Setting | Default | |
|---------------------|------------|--|
| Detection Range | 100% | |
| Hold Time | 30 seconds | |
| Standby Light Level | 10% | |
| Standby Light Time | Infinity | |
| Daylight Sensor | Disabled | |



Normal Sensor Function

The light will turn on when the sensor detects motion and will remain on full light for the duration of the hold time once motion is no longer detected. After the hold time has elapsed, the light dims to standby light level. It can then be set to remain in standby mode (recommended) or turn off completely after the twilight time.




when motion is detected.



When movement ceases, after the **hold time**, the light switches to standby mode. If **twilight time** is set to *infinity*


the light remains in standby mode and does not turn off.



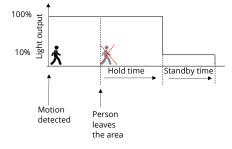

Using the Daylight Sensor

The light can be set to turn off when there is enough ambient light during the day. Then automatically turn on at standby light level as ambient light levels drop in the evening. This is useful if the light is mounted outside or near windows. To enable the daylight monitoring function, select one of the lux settings on the remote commissioning tool (2 lux, 10 lux, 50 lux) or press the blue daylight sensor button on the remote commissioning tool (takes current ambient light level as new threshold). Refer to the images below for details of this function.

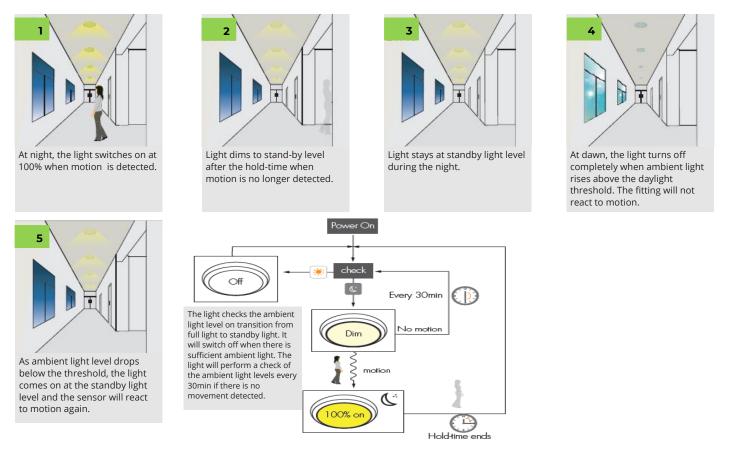

Please note: Other lights present in the area can potentially influence the ambient light reading of the sensor. The daylight monitoring function can only be activated when the motion sensor is enabled (**Auto Mode** button).

Settings in the example above: Hold-time 10min, daylight threshold 50lux, standby period +∞, standby dimming level 10%.

July 2021 E&OE



1800 365 444