

Tauro Black CECS




Installation Instructions

NOTE: All electrical work must be carried out by a licensed electrician as per the latest AS 3000 wiring regulations. This luminaire contains non-user replaceable lamps.

The light must be operated within its specified operating parameters and in accordance with our warranty requirements. These documents are available on our website.

The Tauro Black CECS lights are fitted with a wireless receiver to connect to the CECS master controller for car park entrance light control. Once the lights are connected to power, the wireless mesh network between the CECS controller and the lights is setup automatically.

Mounting

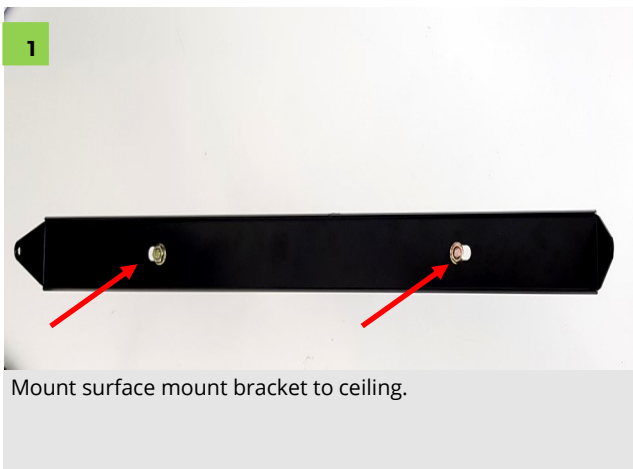

Mount surface mount bracket to ceiling.



Secure light to surface mount bracket using the bolts provided.


For the correct spacing between the light fittings in the car park entrance please refer to the spacing tables for the car park entrance control system (CECS).

These spacing tables are included in the box of the CECS master controller module.



Alternatively, use lighting layout plans provided by your lighting designer.

Dimensions

90W model

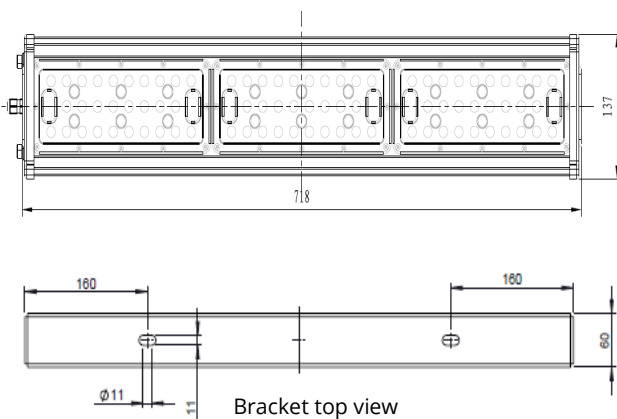

120W model

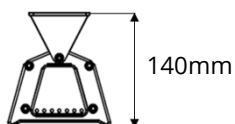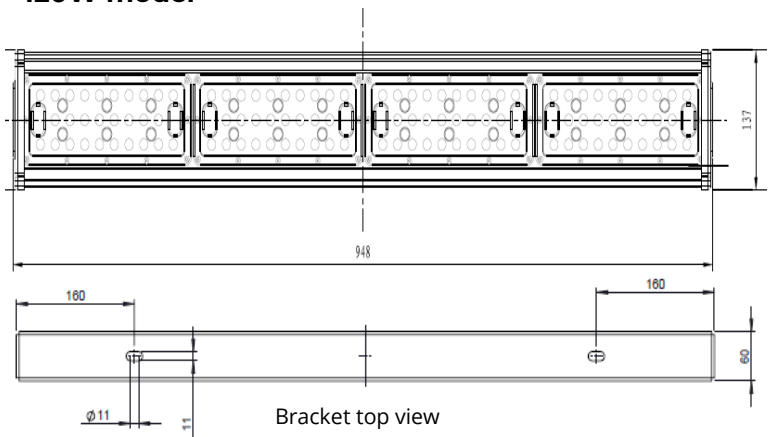

Cleaning

To clean the fitting use a damp soft cloth. Do not use chemical cleaning products.

March 2021 E&OE

Key Luminaire Specifications

Model	Version	Power Rating	Ambient Temperature	IP Rating	IK Rating	Weight (incl. bracket)
TB90D-CECS	90W CECS	220-240V 50/60Hz, 90W	-30°C to +50°C	IP65	IK10	5.5kg
TB120D-CECS	120W CECS	220-240V 50/60Hz, 120W	-30°C to +50°C	IP65	IK10	6.6kg